# Instructions for the iPod Nano

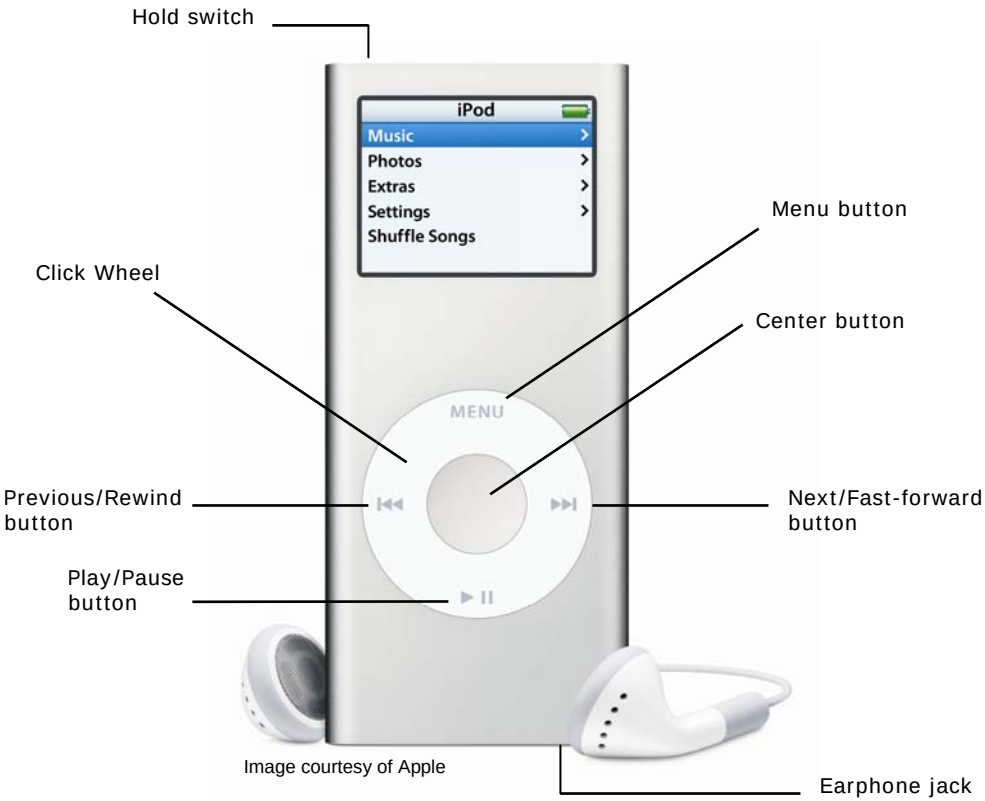


- To turn on iPod: Press any button.
- To turn off iPod: Press and hold Play/Pause.
- To select a menu item: Move your thumb lightly around the Click Wheel to scroll to the desired item, then press the Center button.
- To go back to the previous menu: Press Menu.
- To go directly to the main menu: Press and hold Menu.
- To control volume: From the Now Playing screen, use the Click Wheel.
- To fast-forward or rewind: Press and hold Next or Previous, OR, from the Now Playing screen, press the Center button and use the Click Wheel.
- To view photos as a slide show: Select the first photo and press Play.
- To disable the controls to avoid pressing them accidentally: Slide the Hold switch to the "Hold" position (an orange bar appears)

When you receive the iPod Nano from the library, it should be fully charged and should run for approximately 24 hours of audio playback.

A battery icon in the upper right corner of the screen indicates the charge:

Battery less than 20% charged

Battery about halfway charged

Battery fully charged

If the iPod needs to be recharged, please return it to the library.

**If the iPod's controls don't work**, make sure the Hold switch on the top of the iPod is *not* set to the "Hold" position.

Please do not connect the iPod to a computer, as this may cause the contents to be erased.

Return the iPod to a staff member at the Library Circulation Desk. Do not place it in the book drop.

**The borrower will be held responsible for the full replacement cost of a lost or damaged iPod.**

Miami-Dade College

**Kendall Campus Library**

**Library Reference Desk:**
**(305) 237-2077 or (305) 237-2292**